

Auto Injection System INTROFILL—H8 Clean Video

1. First - Use the lukewarm water and full and out .



2. Second- Use the Alcohol to there same method.

If you finished clean, you have to dry to filter by naturally, then you can use it after a few working days.

(To dry the filter, you can disassemble it and dry it naturally.)



3. You can separate the filter on the back side. Just turn left.

4. Cleaning Air filter



1. Turn the air filter anticlockwise direction and separate it.
2. Separate air filter from the main body then clean it and make it dry.
3. After dry air filter, install in reverse order as same way of separation.
4. Turn on the machine and check the vacuum's condition.